


Venting of pumpcylinders


This instruction shows how to vent the pumpcylinder if air is caught inside the pump and causing disfunction of the pump.

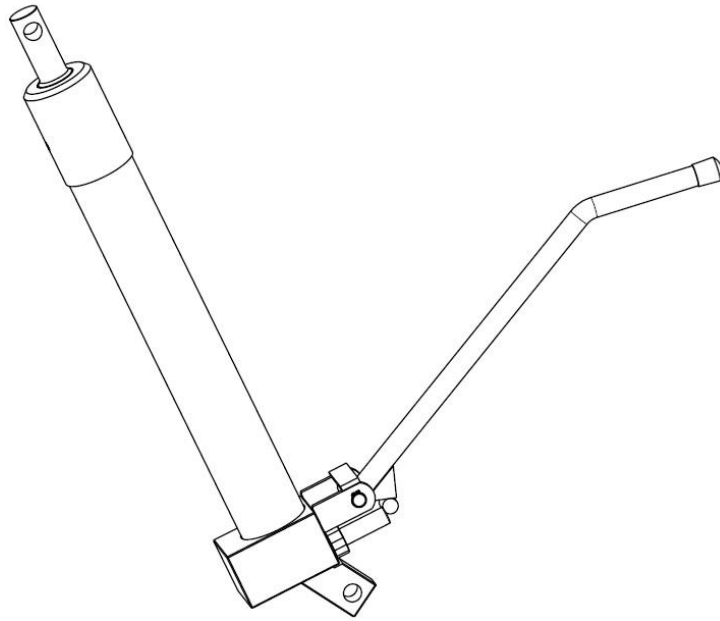


Open the release handle to allow the oilflow to go back and the piston rod to go down.



Press down the piston rod until the stop. If air was caught, the downwards resistance changes when the air is released.

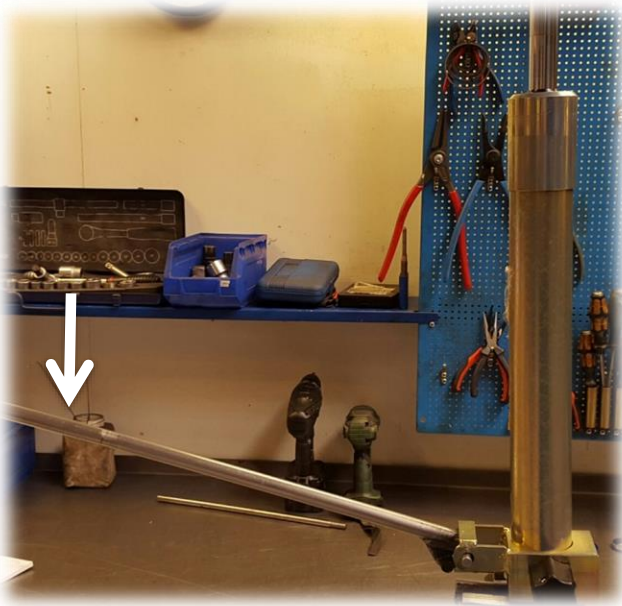


Pump the handle five times with the release handle at open position to ensure that the venting is complete. Close the release handle and the pumpcylinder is ready for use

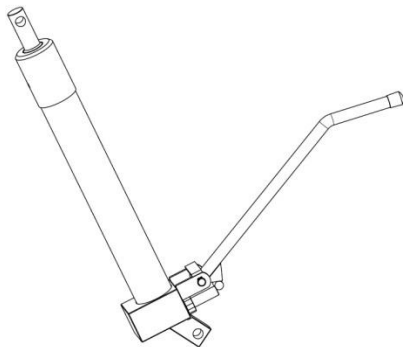

In very rear cases, the pumpcylinder still contains air and is malfunctioning.



Open the release handle and press the piston rod upwards. If the pumpcylinder contains air the upwards resistance will change.

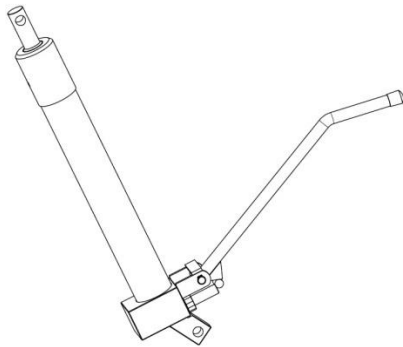

The pumpcylinder is now ready for use. In case it is still not working, please contact Hydrflex A/S